

Pom

Inhalt

- 1 Bodenplatte inkl. Gleiter
- 1 verchromtes Standrohr
- 1 Kunststoffteil schwarz
- 2 verchromte Querrohre
- 4 Gummi
- 1 Befestigungsschraube
- 1 Metallstift

Content


- 1 base with transparent feet
- 1 chrome plated base-tube
- 1 black synthetic part
- 2 chrome plated lateral tubes
- 4 rubbers
- 1 mounting screw
- 1 metal-bolt

Pflege

Mit weichem, falls erforderlich feuchtem Tuch reinigen. Keine scheuernden Reinigungsmittel verwenden.

Care

Clean with a soft, if necessary moist cloth. Do not use any abrasive cleaning products.

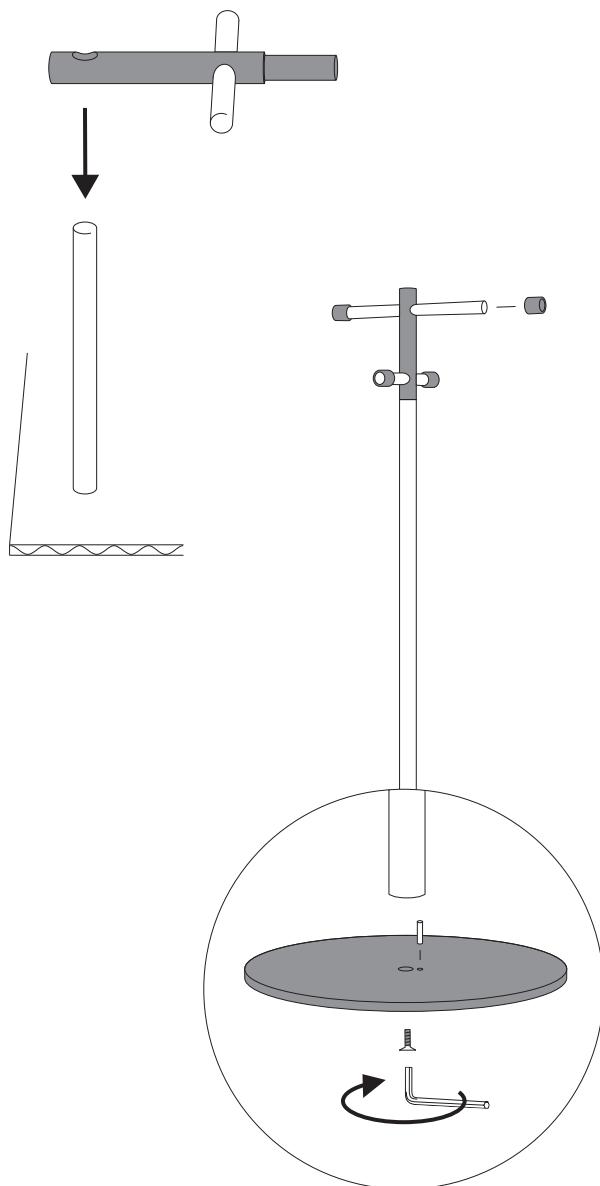

Zuerst den Metallstift in die kleine Bohrung der Bodenplatte einsetzen, dann das Standrohr mit der Grundplatte verschrauben. Die Schraube muss satt angezogen werden, damit sich das Rohr im Gebrauch nicht löst.

Die beiden Querrohre durch das Kunststoffteil stossen. Das Kunststoffteil muss Zimmer-temperatur aufweisen, damit die Bohrungen genügend gross sind.

Die Querohre nicht drehen beim Durchstossen, da diese sonst Kratzspuren abbekommen.

Zuletzt die 4 Gummi über die Rohrenden stülpen.

Insert the metal-bolt into the small hole in the base and screw the base onto the base-tube. The screw must be tighten well, so it cannot loosen when in use.

Press the lateral tubes through the black synthetic part then insert this into the base tube. Do this only when all parts have room temperature.

Avoid turning the lateral tubes when inserting as they can get scratched.

To finish, the 4 rubber parts must be stuck on the lateral tubes.

MOX